



ASSEMBLY INSTRUCTIONS

Top Crown

(FOR #8505 & #8506)

Thank you for your purchase. Check all packing material carefully for small parts which may have come loose during shipment.



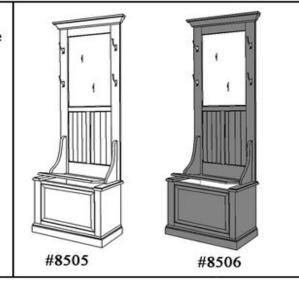

Step:

①,Connect the Decorative Blocks to mirror frame by using bolts(A) with the Allen wrench provided.

②, Connect the top and the base of the hall tree by using Bolt(A) with the Allen wrench provided.

Attach the hooks onto the hall tree by using the screw(B) with driver provided.

