

ASSEMBLY INSTRUCTIONS

ITEM NO : 8994 - Z LEG WRITING TABLE WITH USB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipping.
 Note: place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the product. Kindly follow the assembly instructions step by step.
 Do not tighten all screws and bolts until the table is fully assembled.

This product is heavy, it is suggested that this product be assembled by two people. (One set up and the other one supports) The assembled desktop and table legs may have a slight height tolerance. Please adjust by slightly adjusting the bolts before tightening them all bolts. Thank you for your cooperation.

PARTS LIST


DESCRIPTION		QTY
A	TABLE TOP	1PC
B	LEGS 1L+1R	2PCS
C	MIDDLE BOARD	1PC
D	PEN HOLDER	1PC

HARDWARE LIST

DESCRIPTION		QTY
1	ALLEN KEY M4	1PC
2	BOLT (M8*40mm)	10PCS
3	SPRING WASHER	6PCS
4	FLAT WASHER	6PCS
5	HANDLE	1PC
6	WOOD PLUG	4PCS


STEP 1 :

Put the (A) TABLE TOP facing down on a smooth surface. Attached the B-1R RIGHT LEG as shown; connect with bolt (2), spring washer (3) and flat washer (4) with the allen key (1) provided. (do not tighten the bolt yet)

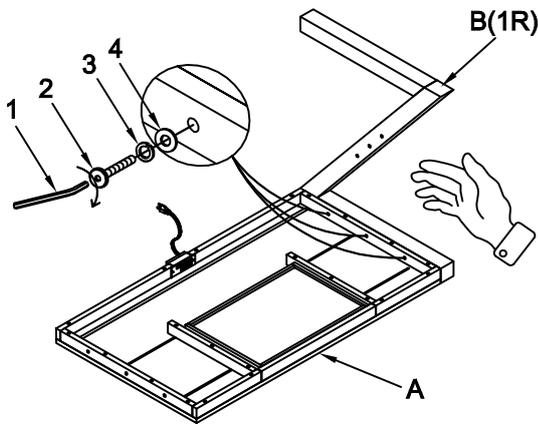


STEP 2 :

Attach the middle board (C) to the right leg (B-1R) assembled in step 1 according to the predefined pin holes. By using bolts (2). Use allen key (1) to screw the bolts according to the instructions, (do not tighten)

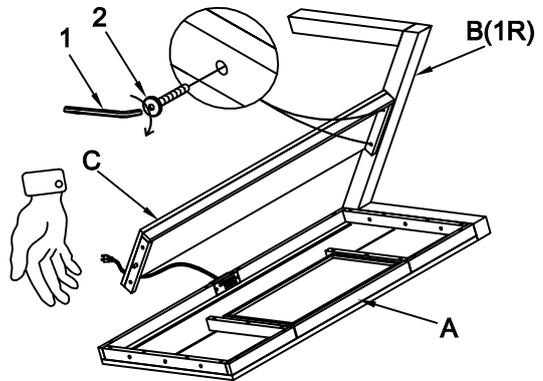

STEP 3 :

Attach the LEFT LEG (B-1L) to the table top (A) and the middle board (C) according to the predefined pin holes by using bolts (2) and spring washer (3), flat washer (4). Use allen key (1) to screw the bolts according to the instructions, (do not tighten)

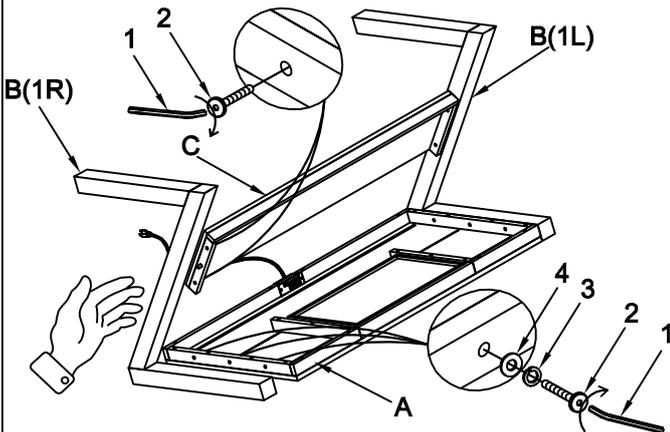

STEP 4 :

Turn the table upside down, with the table top upright. Attached the pen holder (D) using (5) handle to your desired place. The assembled desktop and table legs may have a slight height tolerance, adjust the bolts accordingly to level; then tighten all the screws; attached (6) wood plug to cover the holes.

